

Lesen Sie die Anleitung vor dem Aufbau des Gartentisches sorgfältig durch.  
Schäden, die durch Nichtbeachtung der Anleitung entstehen, sind von der Haftung und Gewährleistung ausgeschlossen.

## benötigtes Werkzeug


- ☐ zwei Innensechskant-Schraubenschlüssel;  
1 x 4 mm Schlüsselweite  
1 x 5 mm Schlüsselweite

## Lieferumfang

Die Lieferung des Gartentisches erfolgt in einer stabilen Kartonverpackung.


Der Gartentisch setzt sich aus folgenden Bauteilen zusammen:

- ① 1 Tischplatte
- ② 2 Tischbeine
- ③ 4 Tischplattenanschlüsse
- ④ 4 Fußkappen
- ⑤ 1 Hülsenmutter mit Innensechskant; M6 Schlüsselweite (SW): 5 mm
- ⑥ 1 Innensechskantschraube; M6, SW: 4 mm
- ⑦ 8 Innensechskantschrauben; M6, SW: 5 mm

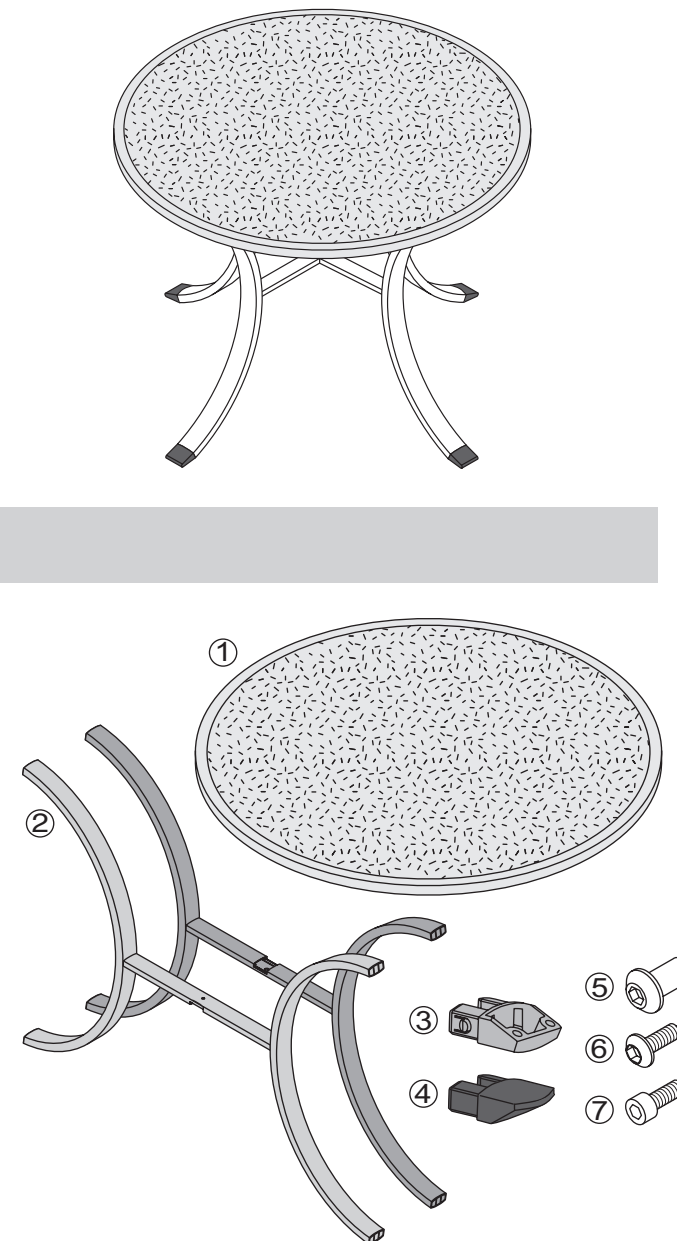

## Aufbauvorbereitung

- ☞ Entnehmen Sie alle Bauteile aus der Verpackung.
- ☞ Prüfen Sie die Vollständigkeit der Lieferung anhand zuvor aufgeführter Liste.
- ☞ Tischplatte mit der Oberseite nach unten auf den Fußboden legen.
- ☞ Tischplattenanschlüsse in die mit seitlichen Bohrungen versehene Seite der Tischbeine einschieben.  
Die Sperrklinken (a) der Tischplattenanschlüsse müssen in die Bohrungen einrasten.
- ☞ Fußkappen in die andere Seite des Tischbeines einschieben.

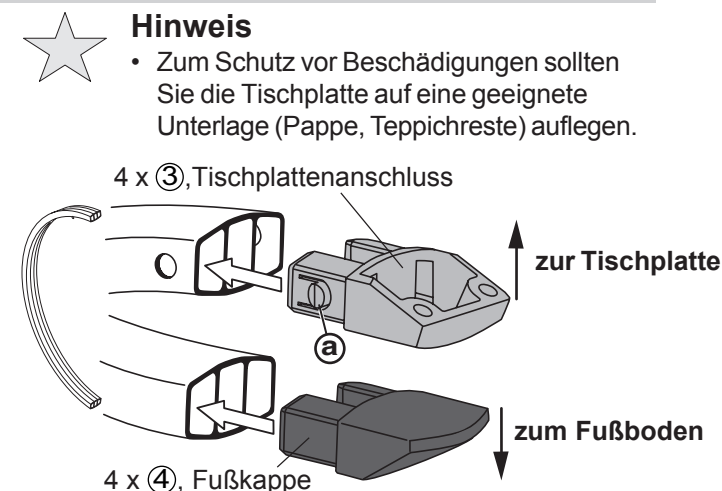


- ★ **Hinweis**
- Zum Schutz vor Beschädigungen sollten Sie die Tischplatte auf eine geeignete Unterlage (Pappe, Teppichreste) auflegen.

## Aufbauablauf

### 1. Arbeitsschritt:

- ☞ Hülsenmutter in die entsprechende Bohrung der Mittelstrebe einstecken (siehe Detailskizze) und die Distanzhülse auf die Hülsenmutter aufsetzen.
- ☞ Die beiden Tischbeine an den Aussparungen der Mittelstreben zusammenfügen und verschrauben.

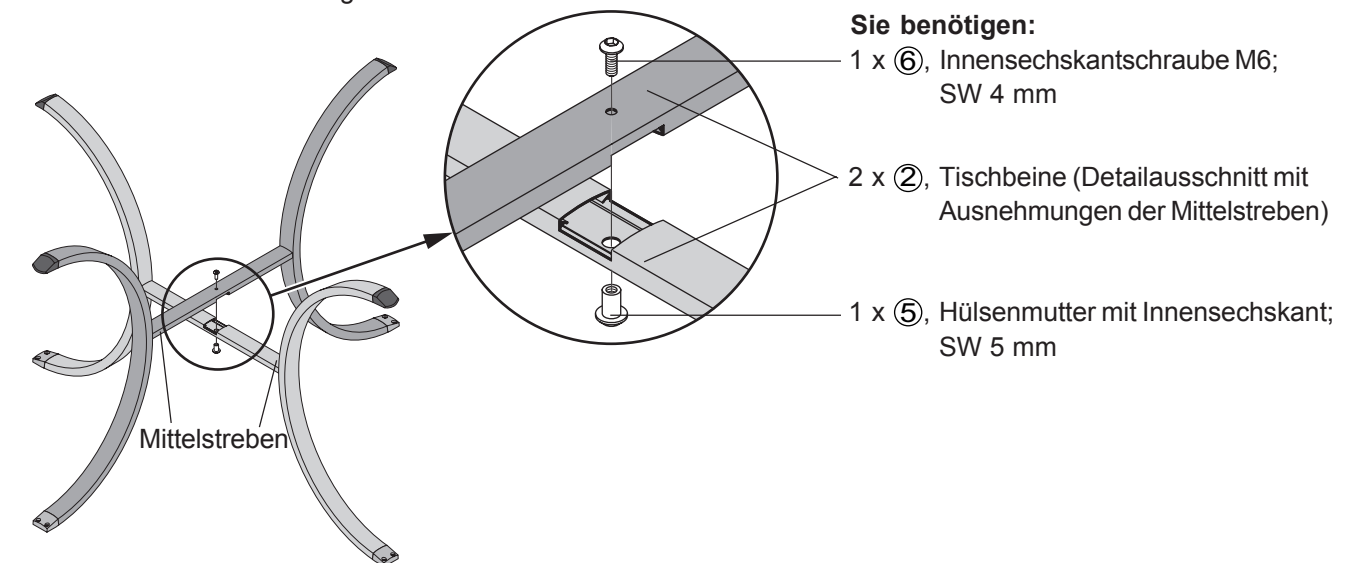

### Sie benötigen:

- 1 x ⑥, Innensechskantschraube M6; SW 4 mm
- 2 x ②, Tischbeine (Detailausschnitt mit Ausnehmungen der Mittelstreben)
- 1 x ⑤, Hülsenmutter mit Innensechskant; SW 5 mm


### 2. Arbeitsschritt:

- ☞ Zuerst alle Tischbeine durch Einschrauben der Innensechskantschrauben lose mit der Tischplatte verbinden.
- ☞ Dann alle Befestigungsschrauben vorsichtig festdrehen.



### Hinweis

Zu starkes Festdrehen der Befestigungsschrauben führt zur Zerstörung des Schraubengewindes, oder zur Beschädigung der Granit-Tischplatte.

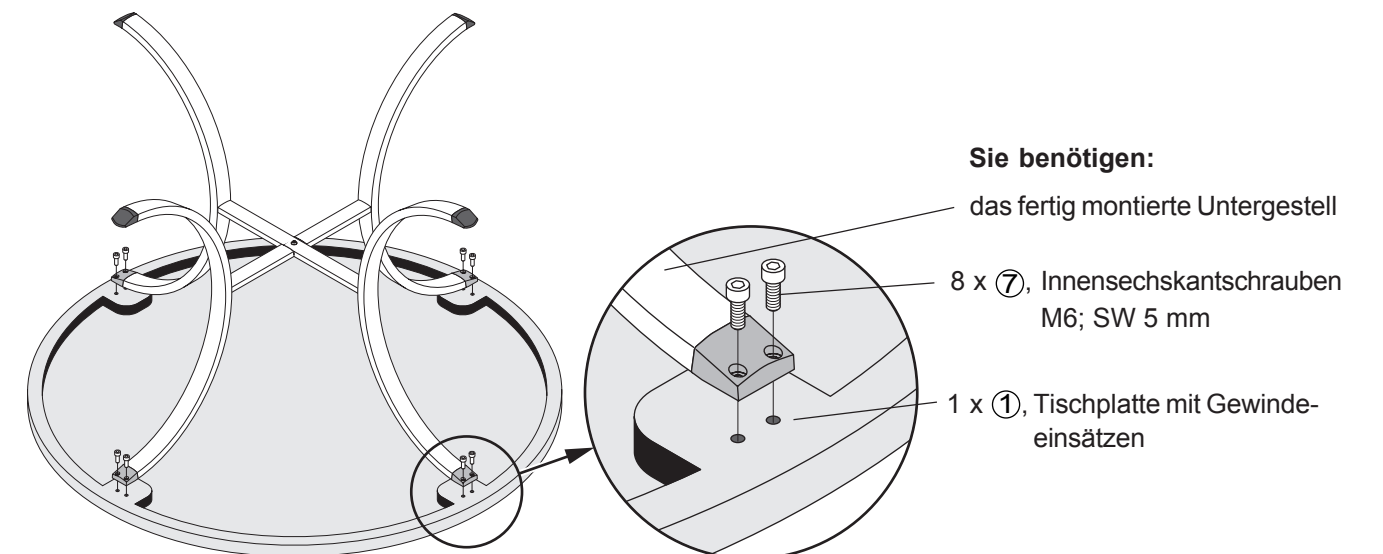


### Sie benötigen:

- das fertig montierte Untergestell
- 8 x ⑦, Innensechskantschrauben M6; SW 5 mm
- 1 x ①, Tischplatte mit Gewinde-einsätzen

Please read the construction instructions carefully through before assembling the table.  
Damages caused by non-observance of the instructions are excluded from any liability and guarantee

### Tools required

- ❑ two Allen keys; 1 x Size 4 mm  
1 x Size 5 mm

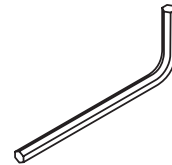


### Included in delivery

The garden table is delivered in stable cardboard packaging.

The garden table is made up of the following components:

- ① 1 Tabletop
- ② 4 Table legs
- ③ 4 Tabletop connection
- ④ 4 Foot caps
- ⑤ 1 sleeve nut with Allen key; M6  
Diameter across flats: 5 mm
- ⑥ 1 Allen screw; M6,  
Diameter across flats: 4 mm
- ⑦ 8 Allen screws; M6,  
Diameter across flats: 5 mm

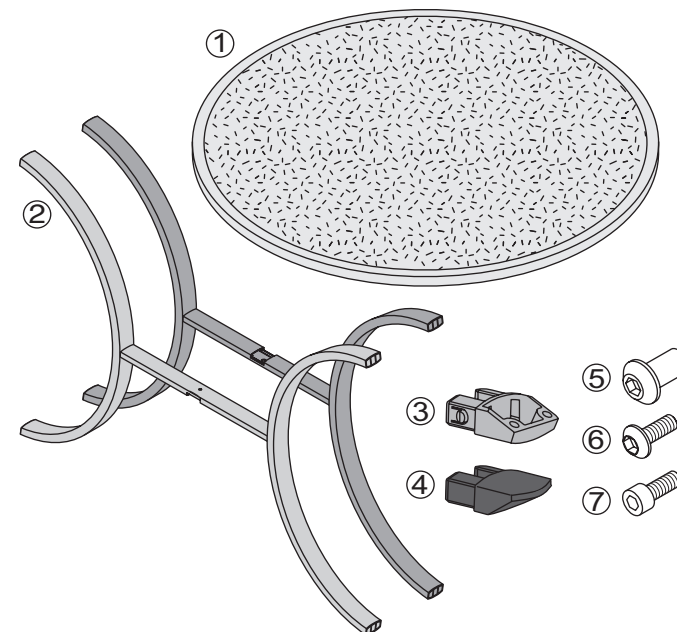


### Preparations for assembly

- Remove all components from the packaging.
- Check that all components have been supplied in accordance with the list above.
- Place the table slab upside down on the floor.
- Press the tabletop connections into the side of the table leg with drill holes in it.  
The tabletop connection catches (a) must engage into the drill holes.
- Push the foot caps into the other side of the table leg.



#### Note


- Please place the table slab on a suitable underlay such as cardboard.

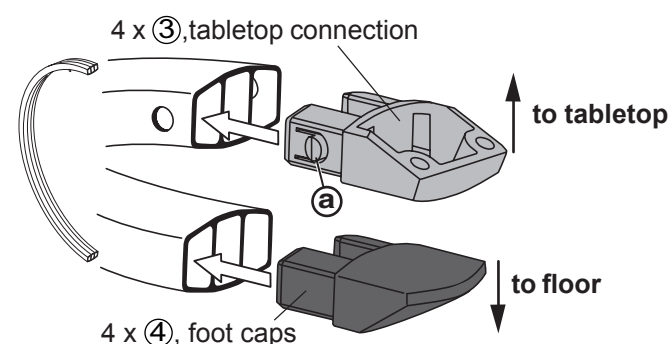

### Assembly

#### 1st step:

- Insert the sleeve nuts into the corresponding drill holes in the centre brace (see sketch) and place the spacer bushes on the sleeve nuts.
- Place both table legs together in the cutouts on the centre brace and screw together.

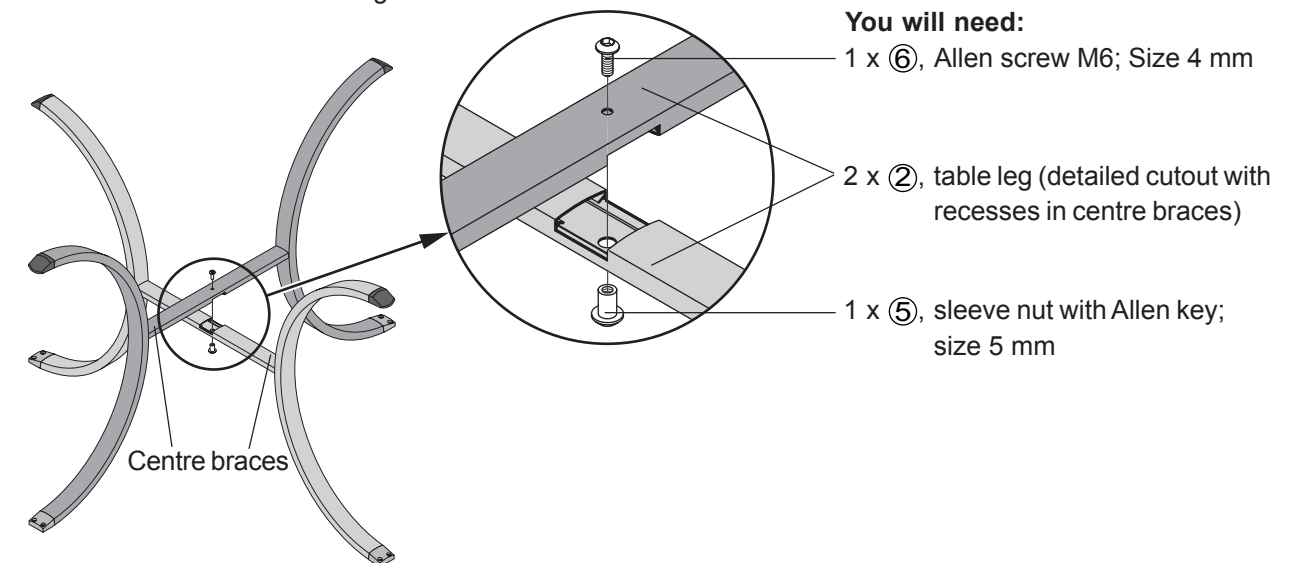

#### You will need:

- 1 x ⑥, Allen screw M6; Size 4 mm
- 2 x ②, table leg (detailed cutout with recesses in centre braces)
- 1 x ⑤, sleeve nut with Allen key; size 5 mm


#### 2nd step:

- First loosely connect all the table legs with the tabletop by screwing in the Allen screws.
- Then tighten all fixing screws carefully.



#### Note

Overtightening the fastening screws will damage the threaded inserts or the granite table slab.

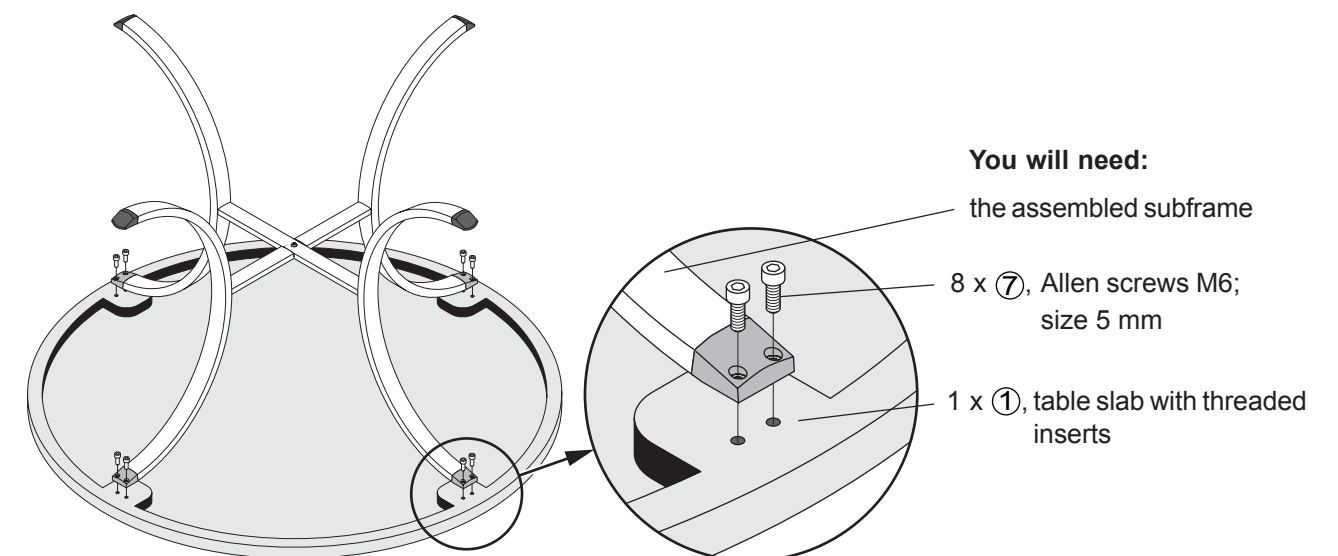

#### You will need:

- the assembled subframe
- 8 x ⑦, Allen screws M6; size 5 mm
- 1 x ①, table slab with threaded inserts